



OIL/WATER SEPARATORS

CP1 / CP2 REPLACEMENT CARBON FILTERS


1. Remove new carbon bag(s) from packaging and fully submerge in clean water for a minimum of 8 hours, agitating periodically.

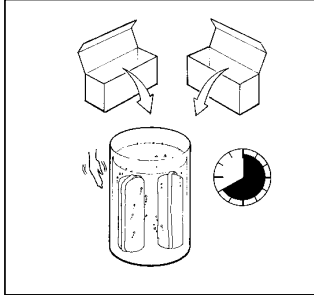


2. After soaking, rinse carbon bag(s) with clean water prior to installation into unit.

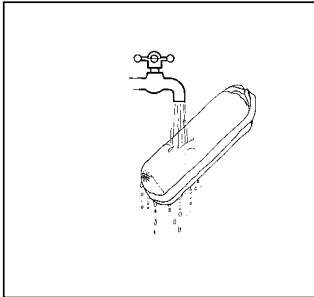

3. Remove inlet head(s)

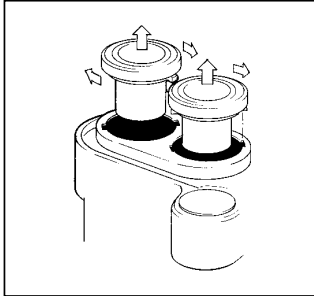


4. Remove existing pre-filter(s) & carbon bag(s) and dispose of in a responsible & legal manner.

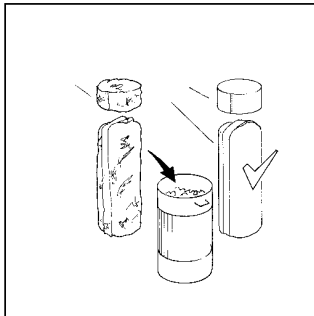


5. Install new carbon bag(s) in carbon stage tube(s).


CARBON BAG IS DESIGNED TO FIT TIGHT. ROLL CARBON BAG TO EASE INSTALLATION

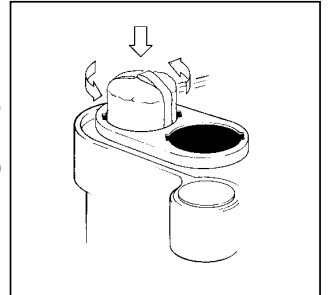


6. Re-fit pre-filter on top of carbon bag(s).

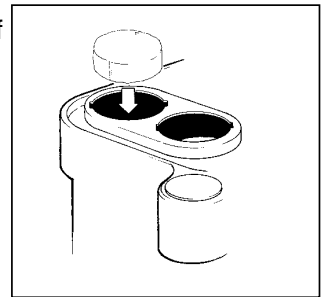

7. Re-fit inlet head(s).

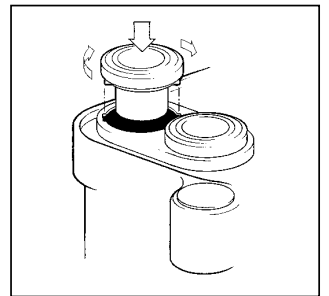

8. Update Service Record.

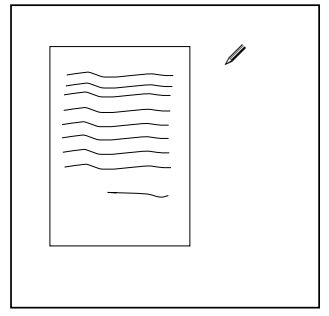

The company has an ongoing policy of product development and although the company reserves the right to change specifications it attempts to keep customers informed of any alterations. This publication is for information only and customers are requested to ask our Industrial Applications Department or a Representative for advice if in doubt on a product's suitability for a specific application.